

Cummins WMABC AGM Maintenance

Fraser Goodwin fraser.goodwin@cummins.com (604) 785-7993


Charlie Ker charles.ker@cummins.com

27/02/2020

Public

Agenda

- **O** L9 Characteristics, Maintenance
- **O** Cummins Westport, Joint Venture
- **O** Key Differences, Diesel & Natural Gas
- **O** L9N / ISX12N Maintenance Guidelines

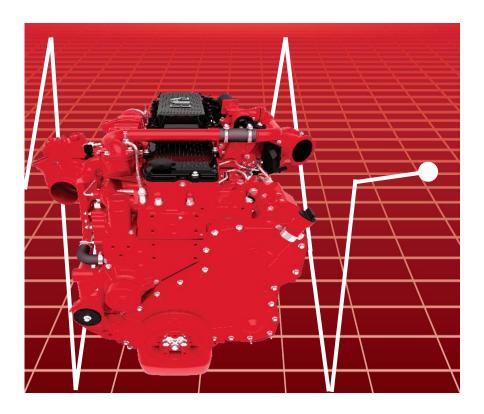

Characteristics



- Single Camshaft
- XPI Fuel System
- Single Module DPF and SCR Aftertreatment System
- Variable Geometry Turbocharger (VGT)
- Exhaust Gas Recirculation System (EGR)

Maintenance Intervals

Maintenance Item	Miles	Kilometers	Hours
Oil and Filter	15,000	24,000	500
Fuel Filter	15,000	24,000	500
Coolant Filter	15,000	24,000	500
Standard Coolant	60,000	96,000	2,000
Overhead Adjustment	150,000	240,000	5,000
Coalescing Filter	Every 3 rd to 4 th Oil Change Interval		
DEF Filter	200,000	320,000	6,500
Particulate Filter Cleaning	200,000	320,000	6,500



Oils complying with CES 20086 or CES 20081 must be used, 10W30 or 15W40 is recommended. For areas with cooler ambient temperatures, please consult the owner's manual for additional information

Drain water from the fuel filter daily. Follow procedure 006-075 when the Water-In-Fuel (WIF) sensor is activated.


When changing the engine mounted fuel filter, never prefill by pouring fuel in the center hole (clean side). Recommended procedure is to install filter dry and turn the key switch on and off 3-4 times and allow the priming pump to fill the filter.



Intro to Cummins Westport Natural Gas Engines

- Joint Venture, Westport (Gaseous Fuels Technology) and Cummins
- 80% Common Components, Diesel
- Shared Assembly Lines
- Similar Ratings / Torque Curves, Diesel
- Parts / Service Supported by Cummins



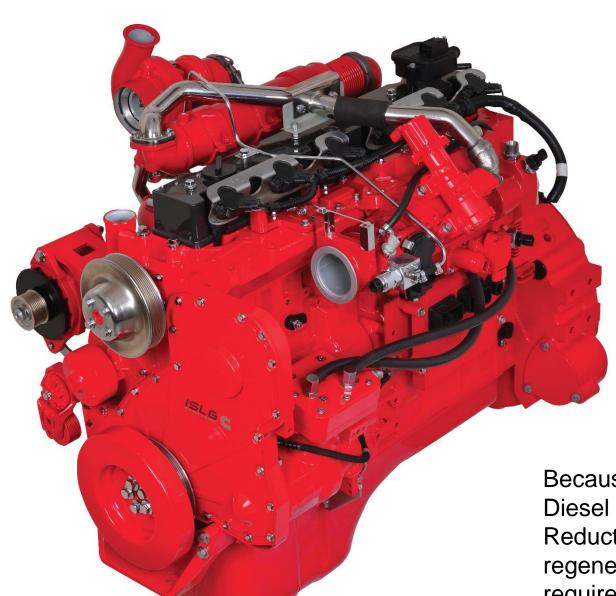

Natural Gas Maintenance Differences

- Spark Ignited, Spark Plug Interval
- Ignition Coil Extension
- Oil Type, Oil Drain Interval
- Fuel Filter Interval
- Overhead (Valve) adjustment

Because Cummins Westport engines do not require a Diesel Particulate Filter (DPF) or Selective Catalytic Reduction (SCR) systems, drivers do not need to perform regenerations, and Diesel Exhaust Fluid (DEF) is not required.

ISL G & L9N Maintenance Intervals

	Hours
Oil & Filter* - CES20085	500
Coolant Filter	500
Oil & Filter* - CES20092	1,000
Fuel Filter	1,000
Valve Adjustment **	1,000
Spark Plugs	1,500
Crankcase Breather Filter - L9N	2,000
Standard Coolant	2,000
Ignition Coil Extension	10,000

^{**} Initial Adjustment at 1000 hours. Subsequent adjustments at 2000 hour intervals

ISL G & L9N Maintenance Part Numbers			
Component	Cummins Part #	Fleetguard Part #	
Oil Filter	3401544	LF9009	
Fuel Filter	3607140	NG5900	
Crankcase Filter*	5288839	CV52055	
Spark Plug Kit**	5473009		
Ign Coil Extension	5265337		
* L9N & ISL G NZ			
** Kit includes spark plug and pregreased boot			
<u>Tools</u>			
Spark Plug Socket	3824876		
Alcohol Prep Pads			

NOTE: Oil drain interval depends on oil type used

ISX12 G // ISX12N Maintenance Intervals			
	Hours		
Oil & Filter* - CES20085	500		
Oil & Filter* - CES20092	1,000		
Fuel Filter - PSI side ISX12 G	1,000		
Spark Plugs	1,000		
Coolant Filter	1,500		
Standard Coolant	6,000		
Valve Adjustment	1,000/3,000		
Ignition Coil Extension	10,000		
Crankcase Breather Filter - ISX12N	10,000		

^{**} Initial Adjustment at 1000 hours. Subsequent adjustments at 3000 hour intervals

ISX12 G & ISX12N Maintenance Part Numbers				
Component	Cummins Part #	Fleetguard Part #		
Oil Filter	4367100	LF14000NN		
Fuel Filter*	3607140	NG5900		
Crankcase Filter**	4389517	A054T283		
Spark Plug Kit***	4309391			
Ign Coil Extension	4389407			
* Optional on ISX12N, if higher pressure filter is 10 micron				
** ISX12N ONLY				
*** Kit includes spark plug and pregreased boot				
<u>Tools</u>				
Spark Plug Socket	3824876			
Alcohol Prep Pads				

NOTE: Oil drain interval depends on oil type used

Important Checks & Procedures

Make sure to visually check the following items daily and take any necessary actions as outlined in your Operation and Maintenance Manual:

- Air Cleaner Restriction Indicator / Gauge
- Coolant Recovery Tank Level (fill when cold)
- Oil Level
- Air Intake Piping, Clamps and Air System Connections
- Radiator Hose for Leaks
- Fuel Filter
 - The fuel filter has a valve that must be opened daily to drain any collected water or oil. Open the drain valve by hand. There will usually be some fuel in the filter under pressure. If there is any water or oil in the filter, it will come out first. Retighten the valve by hand. (Note: The low pressure coalescing fuel filter is optional for the ISX12N.)



For complete maintenance interval details, refer to Cummins Westport maintenance intervals and procedures outlined in your Operation and Maintenance Manual or on QuickServe® Online (QSOL).

Natural Gas Engine Oil Specifications

CES 20085*

Sulfated Ash Level 0.7-0.9%

Calcium 1,800 – 2,300 ppm

Phosphorous 700 – 900 ppm

Zinc 800-1,000 ppm

CES 20092**

Sulfated Ash Level 0.7-0.9%

Calcium 1,200 maximum ppm

Phosphorous 800 maximum ppm


No specification for Zinc**

Cummins recommends using CES 20092 oil



Updated list of CES20092 suppliers available on QuickServe Online > Oil Registration List

Operation & Maintenance Manuals

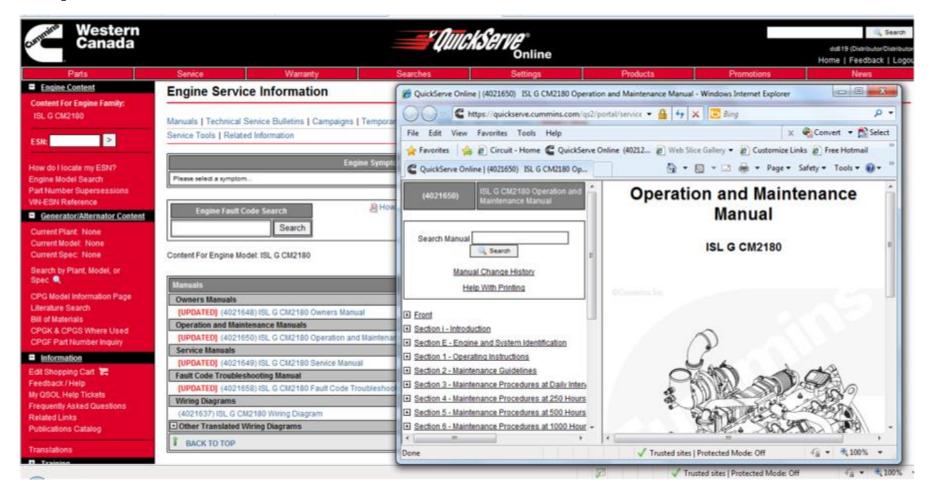

More info can be found in your Operations & Maintenance Manuals at https://quickserve.cummins.com

Q+A

